

卫鹰® NAVISANI®

Intelligent Sanitary Toilet Seat Product Overview



Power Supply:

- (1) Rechargeable battery
- (2) Adapter: input voltage 100V-240V, output voltage: DC 6-7.5V

Starting Method: Button, infrared Sensor (6-12CM)

Applicable Film: NR200, 130-135 use times per roll


Function Description:

- (1) The sanitary film will turn exactly one round automatically to ensure one time use.
- (2) Overload protection: When overloading, the LED will stay on for 2 seconds and the machine stops working.
- (3) Restarting interval: 6 seconds to avoid waste.
- (4) Counter wheel malfunction warning: When counter wheel fails or the film roller is not installed in place, the LED light is on all the time.
- (5) The LED light will flash when battery is in low position.

Button Type: stainless steel button, waterproof IP65 and exceed 200,000 use times

卫鹰[®] NAVISANI[®]

Intelligent Sanitary Toilet Seat Inner Structure

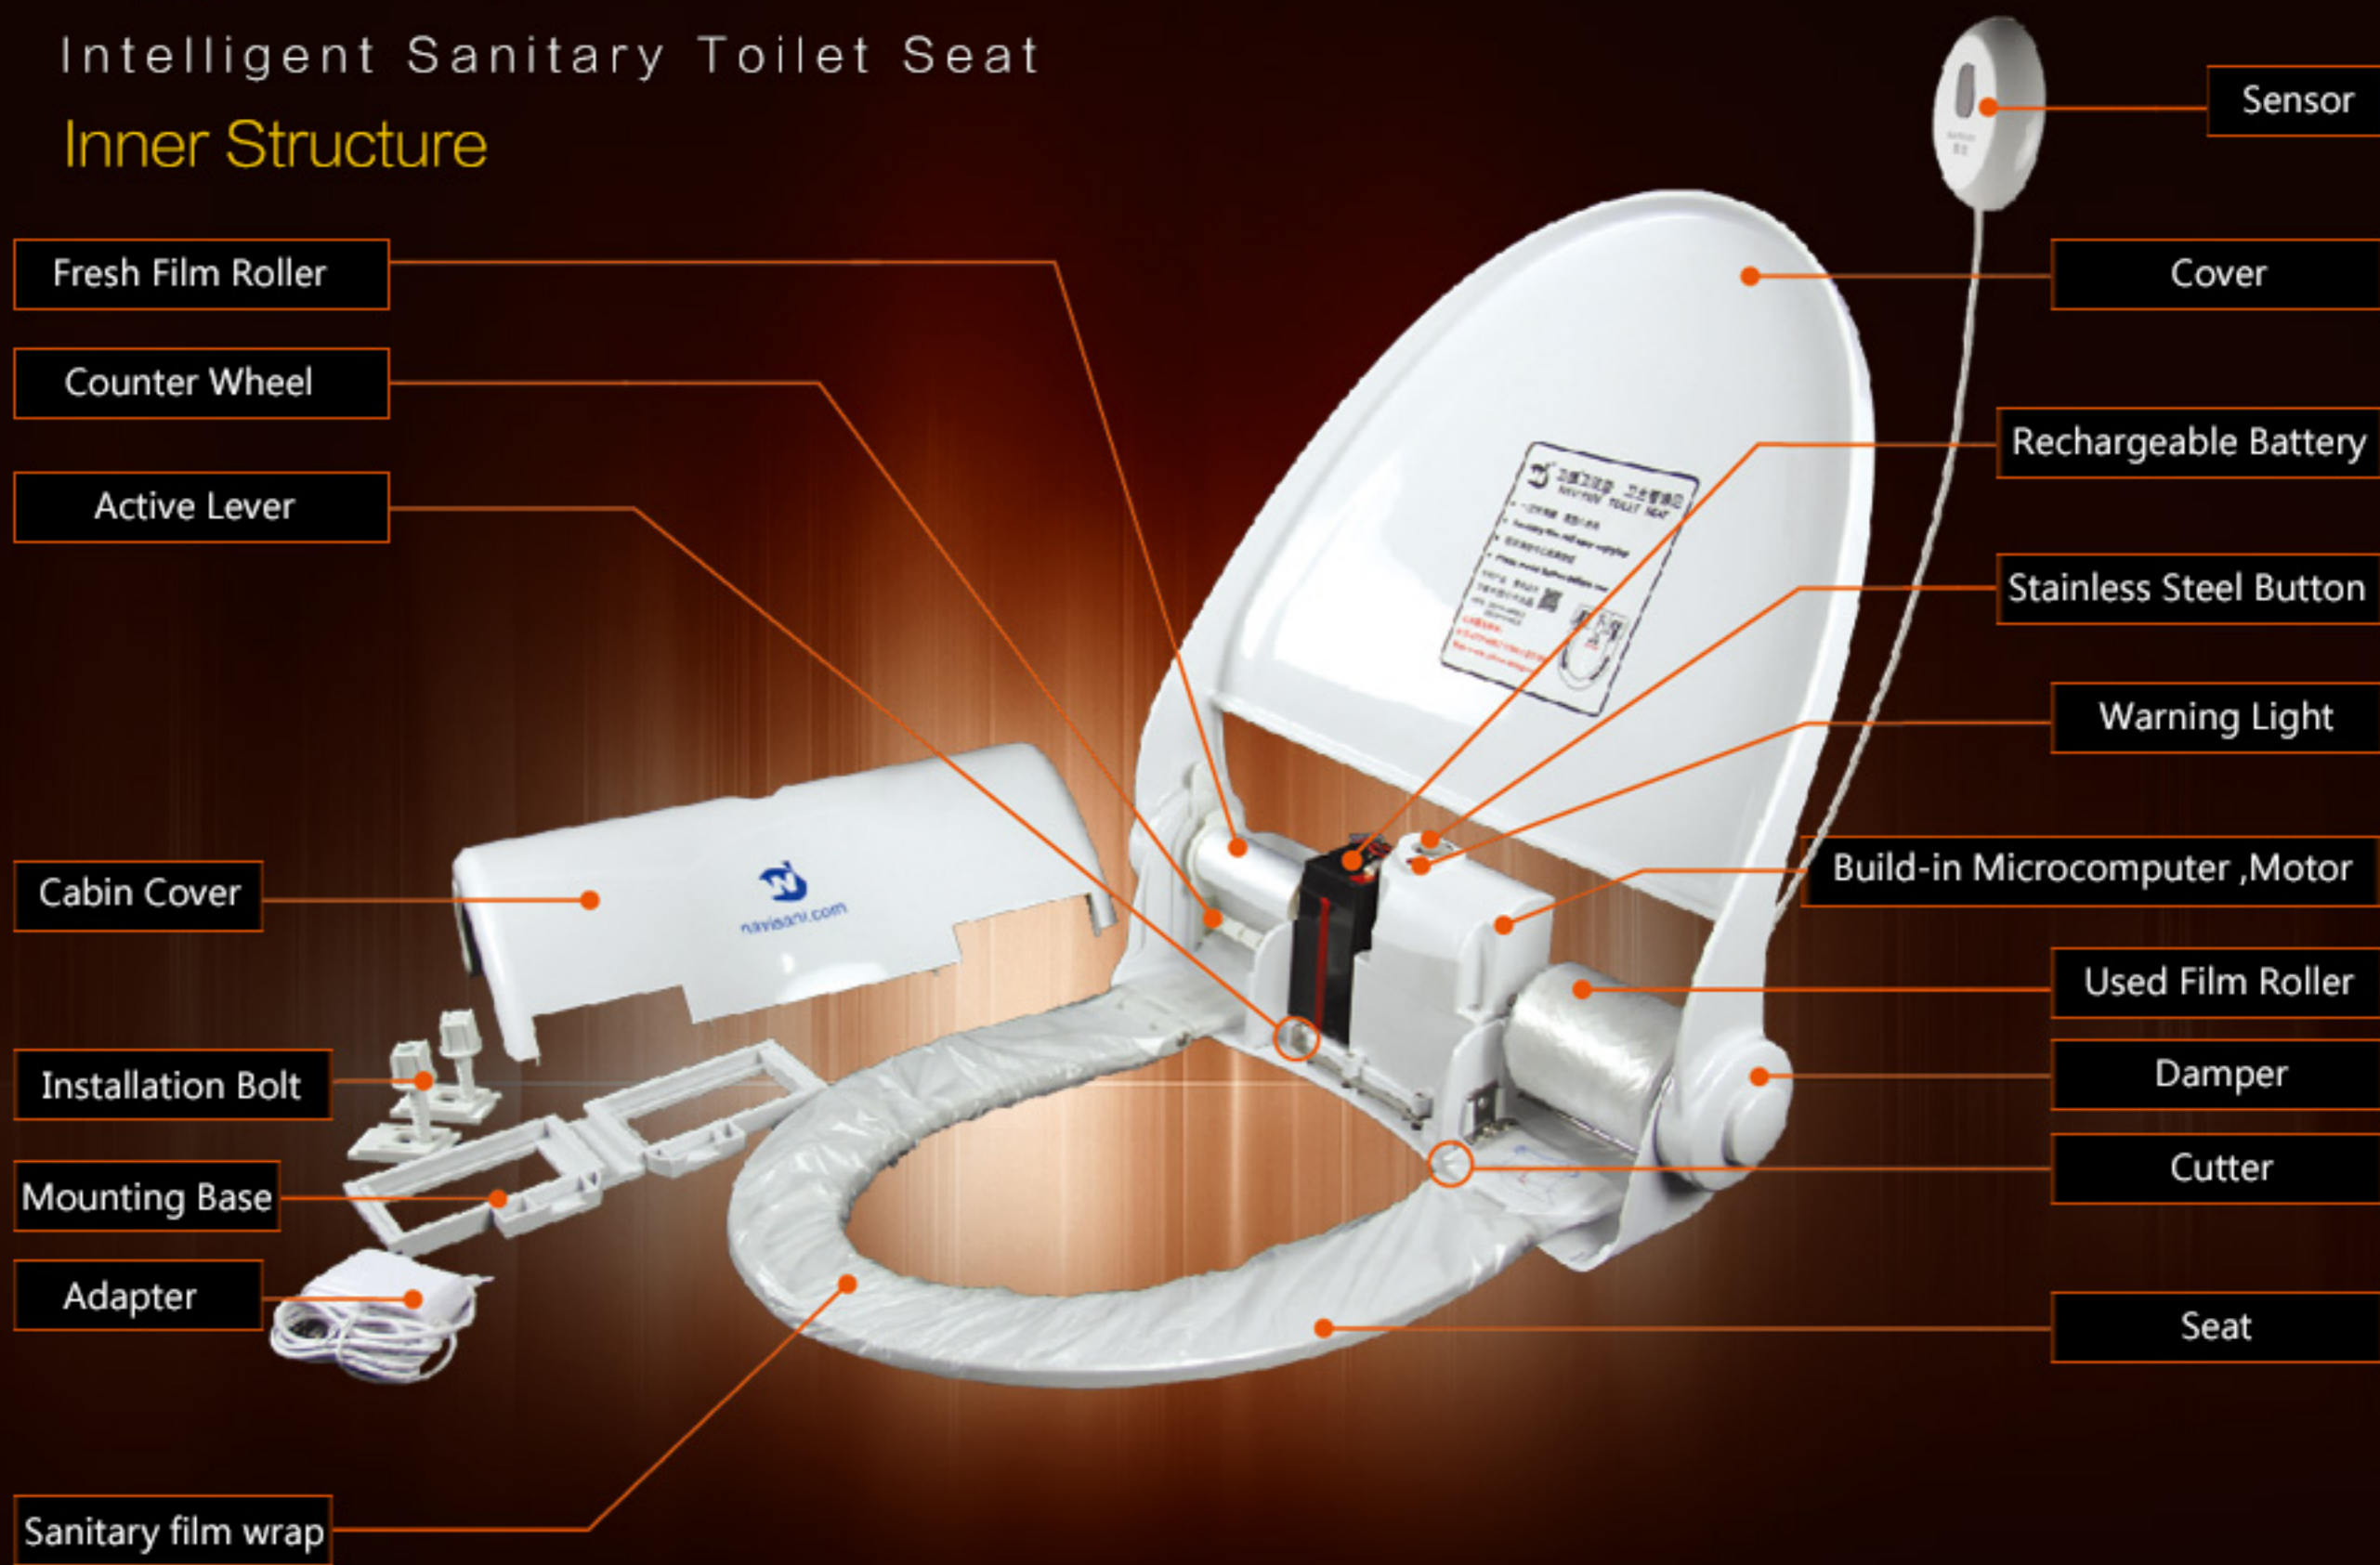

卫鹰[®] NAVISANI[®]

Intelligent Sanitary Toilet Seat
Product Part Details

Button



NS200C1



NS200C2



NS200C3

Stainless steel button, waterproof and exceed 200,000 use times

NS200c1: Simple Stainless Steel Button

NS200c2: Ring Color Light Stainless Steel Button

NS200c3: Point Color Light Stainless Steel Button



卫鹰® NAVISANI®

Intelligent Sanitary Toilet Seat

Product Part Details

Charging Mode



A: Remove the white waterproof cap on the back of pedestal, get the battery charged.




B: Take the seat cabin out, and take out the battery, then have it charged.

卫鹰[®] NAVISANI[®]

Intelligent Sanitary Toilet Seat

Product Part Details

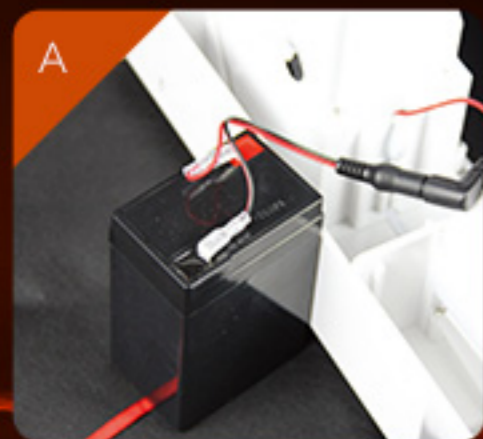

Power Supply Mode

A: Rechargeable battery.

B: Adapter, Input voltage (100-240V), Output Voltage: DC6-7.5V.

卫鹰[®] NAVISANI[®]

Intelligent Sanitary Toilet Seat Product Part Details

Soft Close Cover

Prevent you from crush & other injuries and avoid the noise when dropping rapidly.

In normal environment, the damper can be used for more than 50,000 times.



NAVISANI[®]

卫鹰[®] NAVISANI[®]

Intelligent Sanitary Toilet Seat Product Part Details

Microcomputer Indicator Light(Red)



When overloading the LED will stay on for 2 seconds and the machine stops working.

If no loading or counter wheel fault or the film roller is not installed in place ,The LED light is on all the time.

The LED light will flash when battery is in low position.


Restarting interval (6 seconds) to avoid waste.

卫鹰® NAVISANI®

Intelligent Sanitary Toilet Seat Product Part Details

Sanitary Film Replacement

A red line will appear when the sanitary film wraps remains 1-2m,
it reminds you to replace the film wrap.

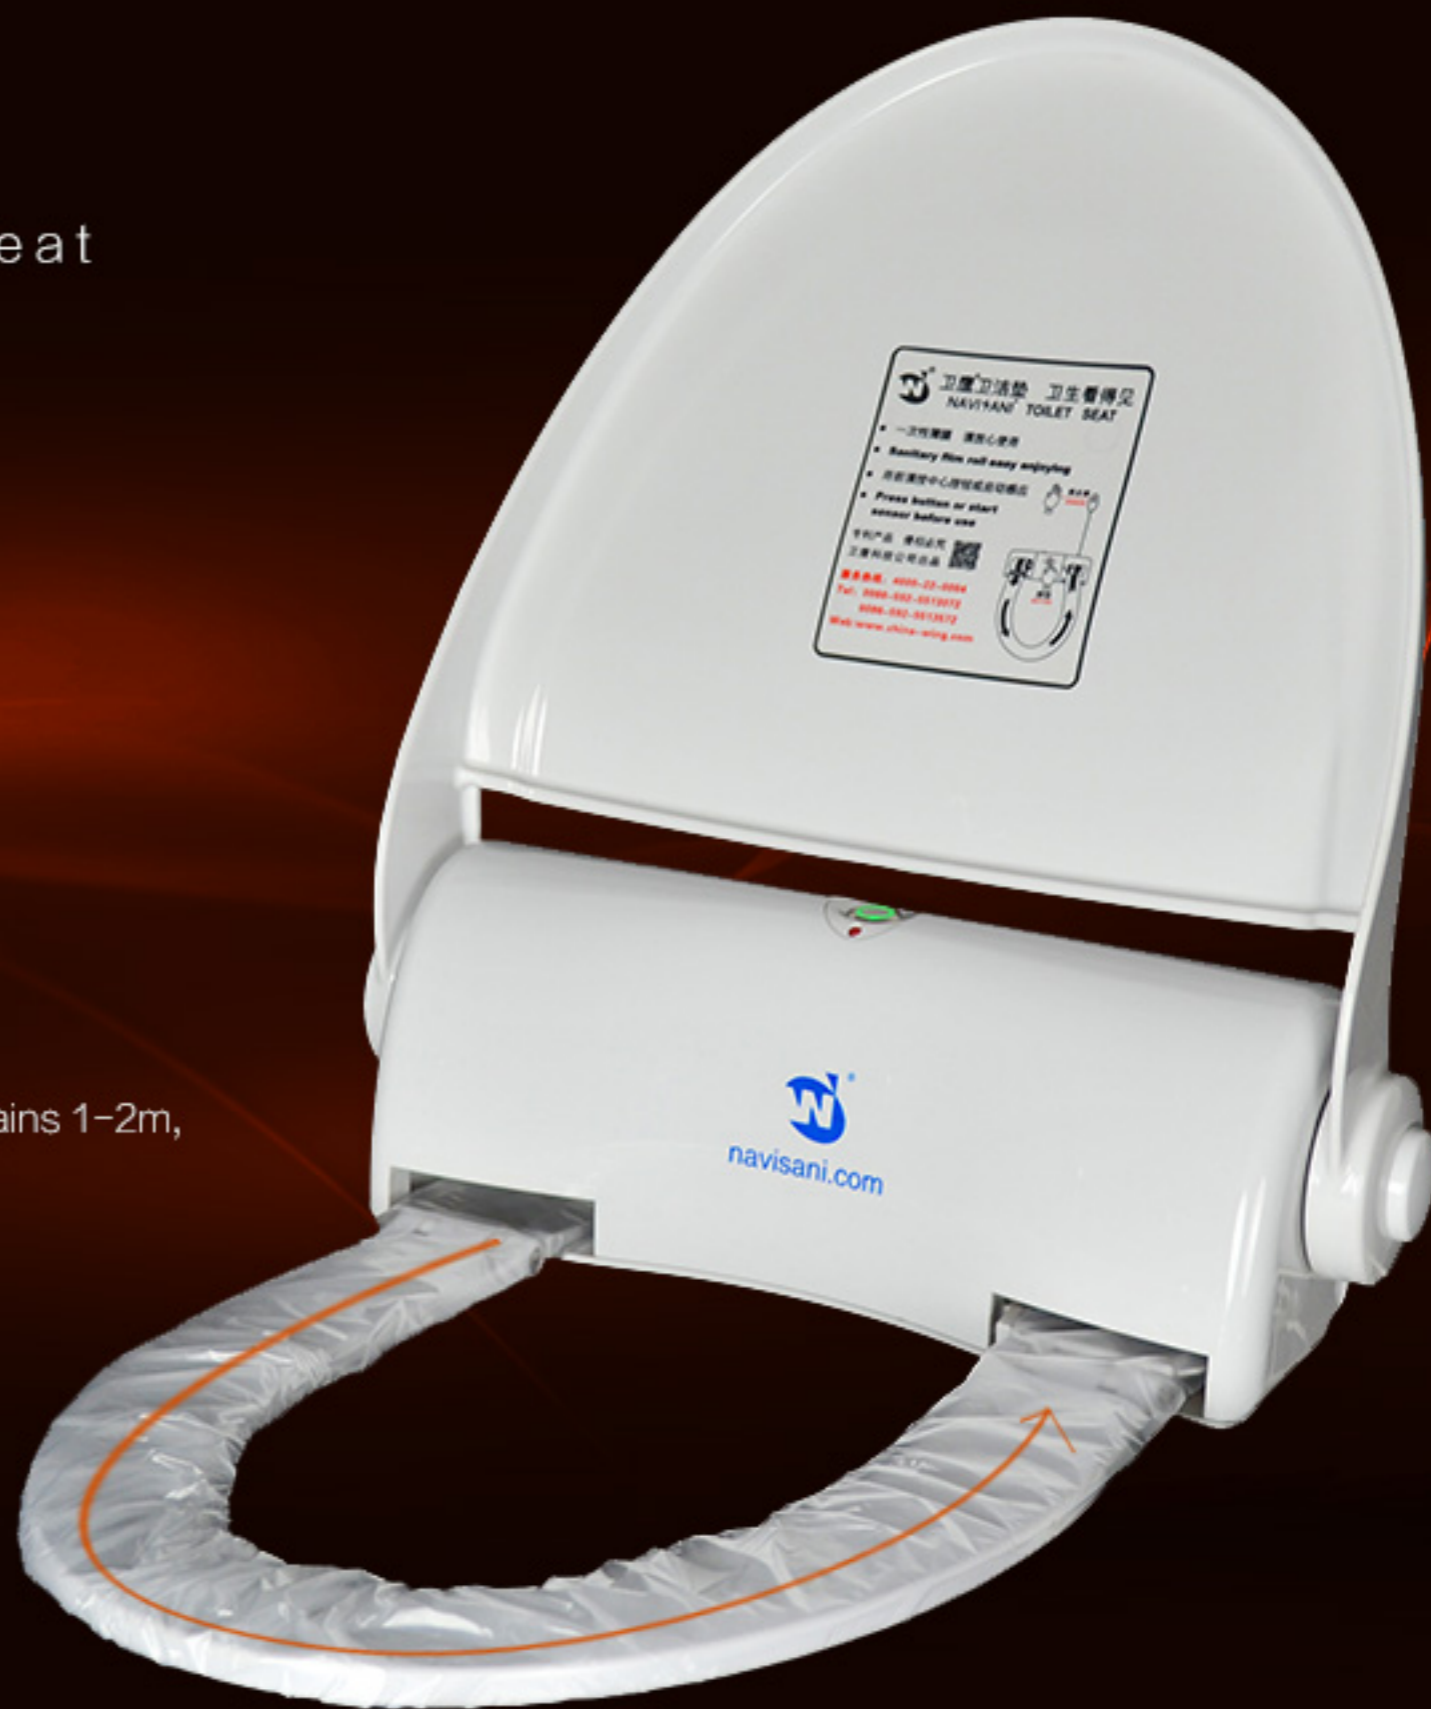


卫鹰[®] NAVISANI[®]

Intelligent Sanitary Toilet Seat Application Scope

NS200C

A (The distance between two holes) 80-210mm

B (From the center between two holes to the top front of toilet bowl) 450-480mm

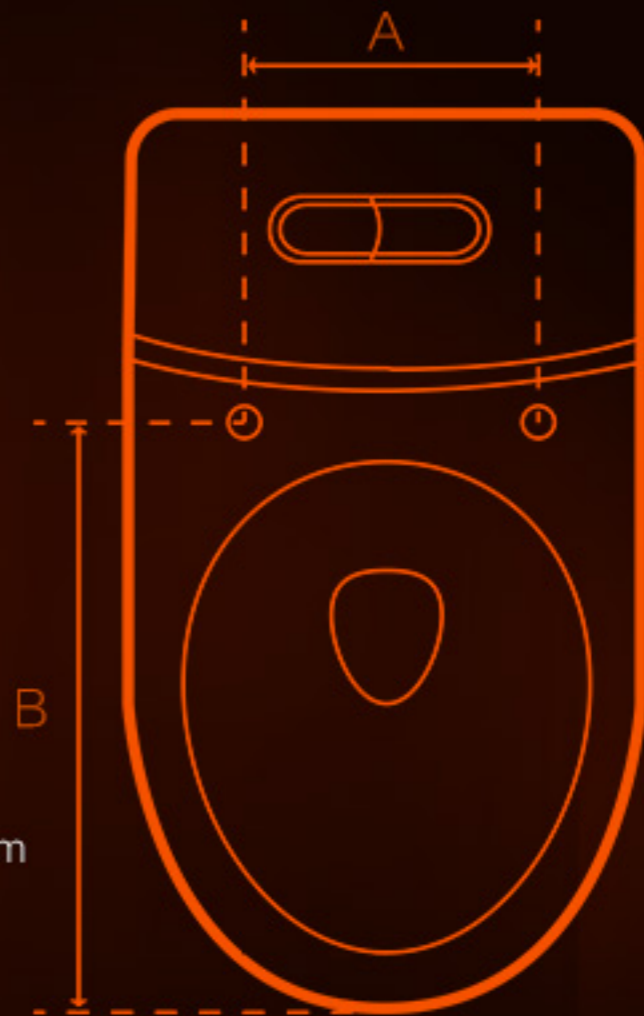

Intelligent Sanitary Toilet Seat Packing Specification

Item	Product	Packing	Small Packing / G.W. / N.W.	Big Packing / G.W. / N.W.
Intelligent Toilet Seat	NS100 Series	Carton Box	460mm*160mm*545mm/set 4.25KG/3.57KG	825mm*470mm*560mm/5sets 23KG/17.84KG
Intelligent Toilet Seat	NS200 Series	Carton Box	480mm*160mm*540mm/set 5.1KG/4.45KG	830mm*490mm*560mm/5sets 28KG/22.25KG
Intelligent Toilet Seat	NS201 Series	Carton Box	480mm*160mm*540mm/set 3.9KG/3.25KG	830mm*490mm*560mm/5sets 22KG/16.25KG
Intelligent Toilet Seat	NS220 Series	Carton Box	480mm*160mm*540mm/set 5.1KG/4.45KG	830mm*490mm*560mm/5sets 28KG/22.25KG
Intelligent Toilet Seat	NS221 Series	Carton Box	480mm*160mm*540mm/set 3.9KG/3.25KG	830mm*490mm*560mm/5sets 22KG/16.25KG

卫鹰[®] NAVISANI[®]

Intelligent Sanitary Toilet Seat Installation Illustration



1

Find the two holes on the toilet bowl.



2

Put the mounting base on the toilet bowl



3

Put on the shims and insert the bolts



4

Adjust the bolts then fasten the bolts with nuts.




5

Slide the toilet seat along the slot and fix it on the plate



6

Adjust shims & bolts to make sure that the toilet seat and toilet bowls are aligned then fasten the nuts.

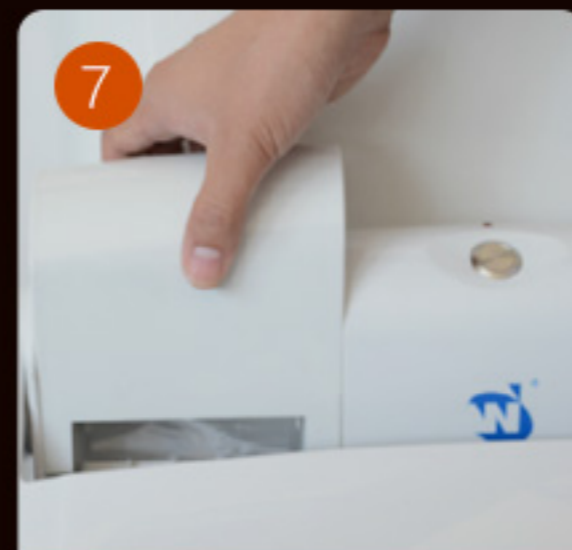

7

How to remove the toilet seat from toilet bowl:
First, take out the left cabin



8

Second: Push the driving lever on right and pull the toilet seat out forward